


Industrial microwave meats food sterilization machine LD1918


LD1918 industrial microwave meats food sterilization machine is a kind of heating type microwave sterilization device for meat production, which solves the problem that the conventional sterilization device in the prior art is not convenient to use, the sterilization effect is not good, and the use time is long, which is inconvenient for the assembly-line process. Production and processing efficiency is low.

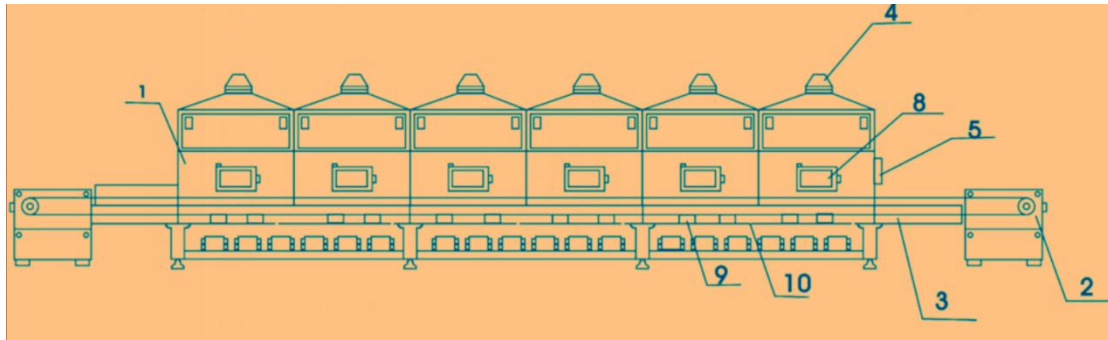

Structure sketch 1 of LD1918 industrial microwave meats food sterilization machine

Advantages of LD1918 industrial microwave meats food sterilization machine:

1. LD1918 industrial microwave meats food sterilization machine has a strip air outlet on the side wall of the hot air chamber. The sterilization effect of the meat food is effectively improved, the sterilization speed is fast, the production line is convenient, and the production processing efficiency is effectively improved.
2. LD1918 industrial microwave meats food sterilization machine is a device for sterilizing vacuum-packed foods. As the temperature of the cooked food can be increased correspondingly, the sterilization speed is faster and the sterilization effect is better.
3. LD1918 industrial microwave meats food sterilization machine compared with conventional heat sterilization, microwave sterilization equipment can obtain the required sterilization effect at a relatively low temperature and in a short time, in order to ensure more nutrients and color, fragrance, taste, shape and other flavors are retained after sterilization
4. Microwave delicatessen sterilizer has its unique non-thermal effect, which can achieve lower temperature sterilization and maximize the nutritional content of the product.

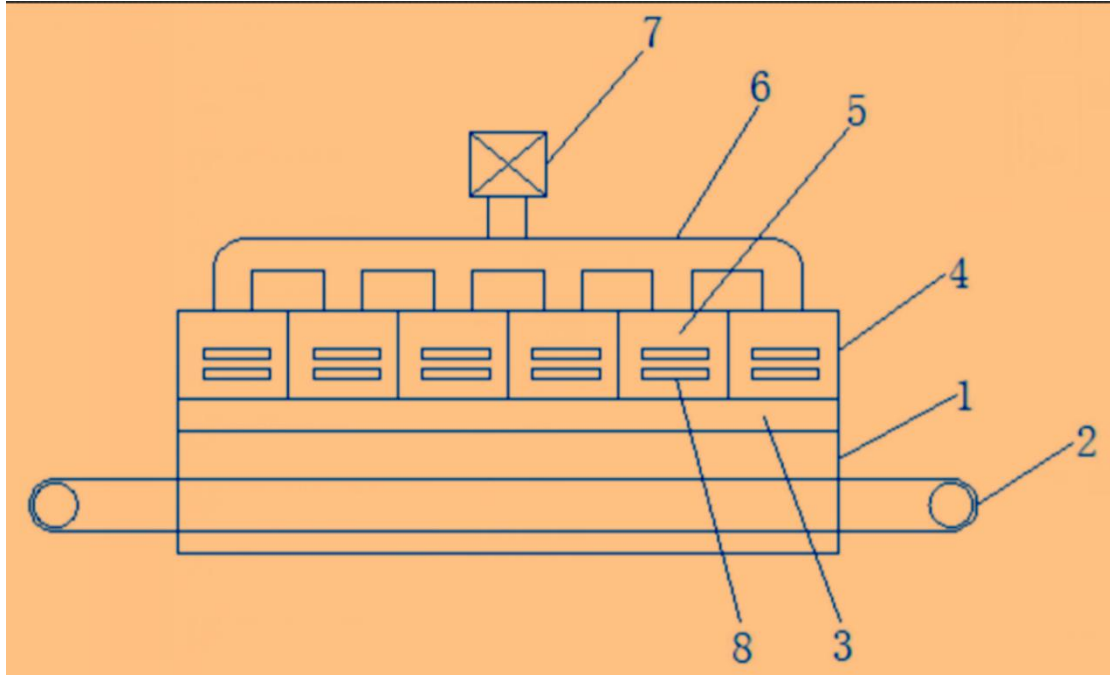

Structure sketch 1 of LD1918 industrial microwave meats food sterilization machine
 Microwave sterilization box 1, conveyor belt 2, microwave generating device 3, hot bellows 4,
 hot air chamber 5, through air duct 6, hot air blower 7, strip air outlet 8

Technical parameters of LD1921 LD1918 industrial microwave meats food sterilization machine:

Daily capacity	8T-10T	Leakage value	$\leq 3\text{mw/m}^3$
Total power	30KW/h	Microwave frequency	2450/915MHz
Transmission speed	0-5m/min(adjustable)	Cooling method	Water cooling
Sterilization capacity	300-400kg/h	Working method	Completely continuous
Size	10500x840x1800mm	Heating method	Electric

So far, our products from Leader Microwave Equipment Company have been exported to more than 20 countries and regions, such as In the Middle East, Africa and Southeast Asia. It is our principle to produce high-quality equipment and provide perfect service. It brings us friendship and good reputation with customers. Welcome to contact us.